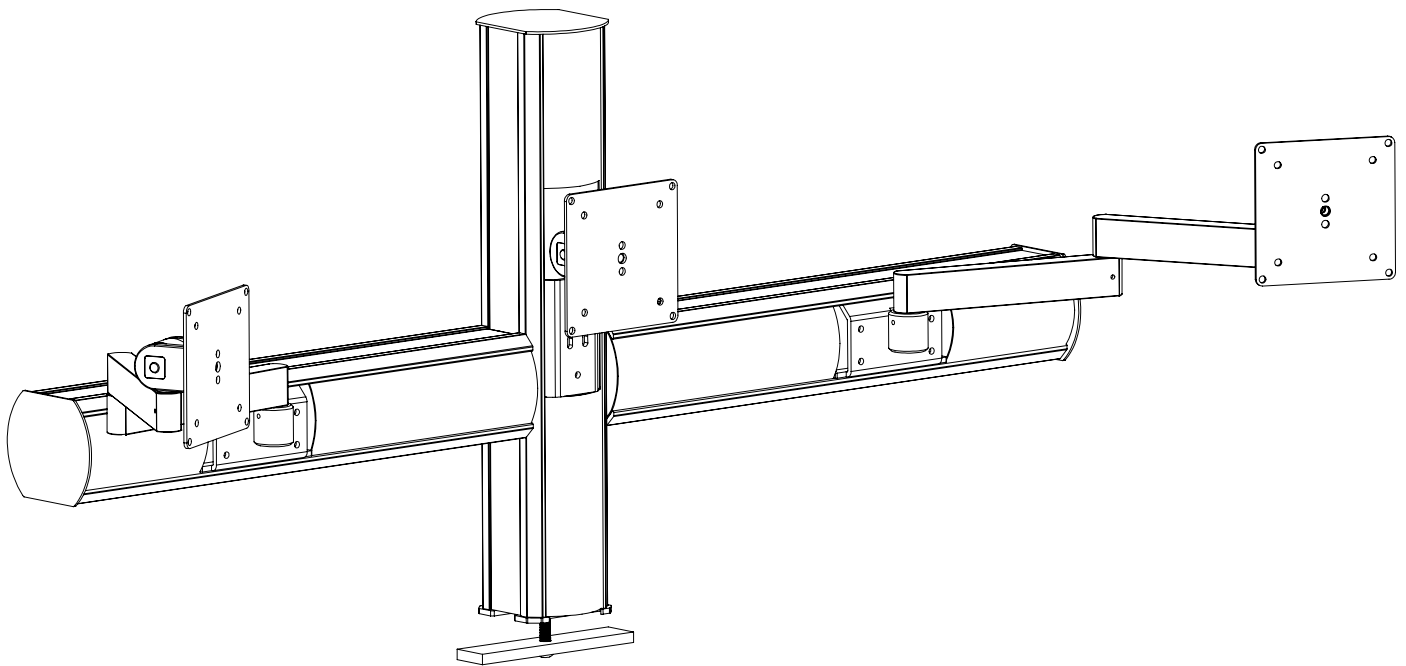# WINGS

CONTENT

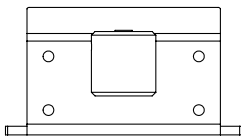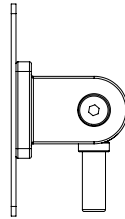**1x**

WITH CLAMP
OR BUSHING

2x
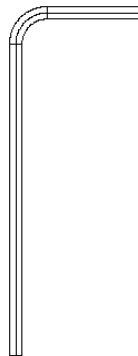
COVER SMALL

COVER LARGE

2x

3x

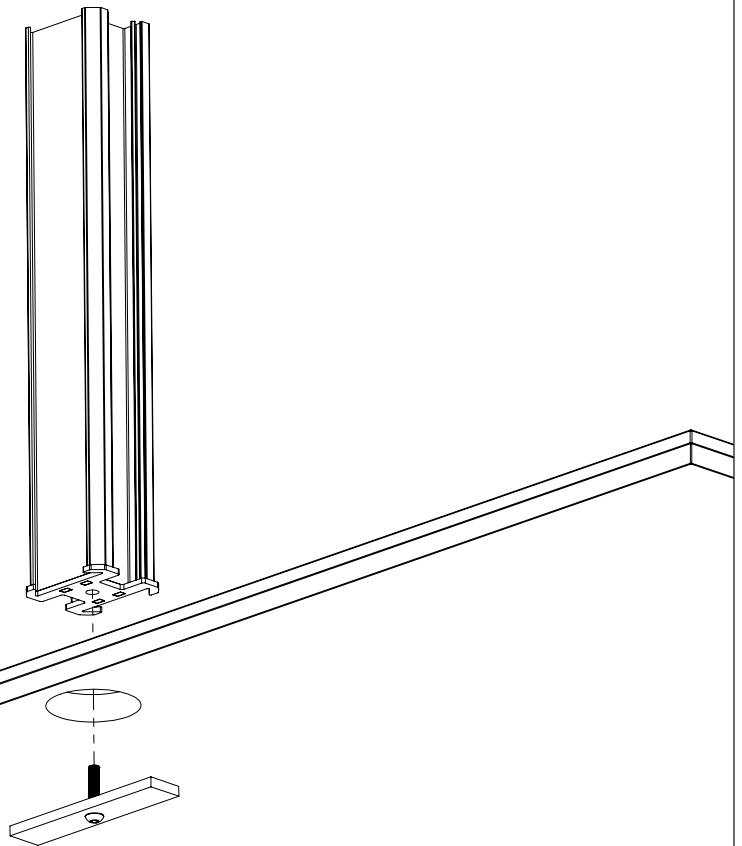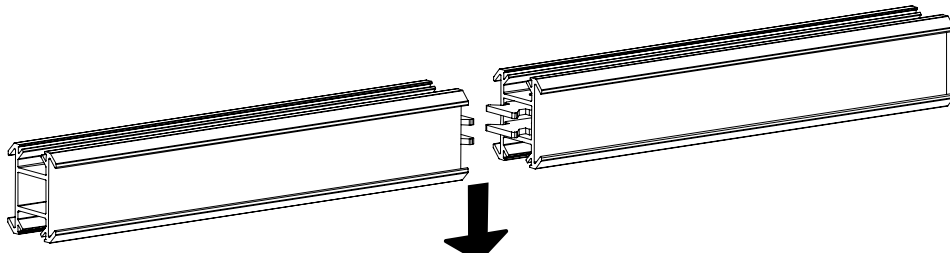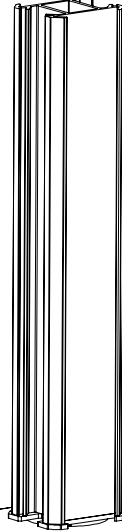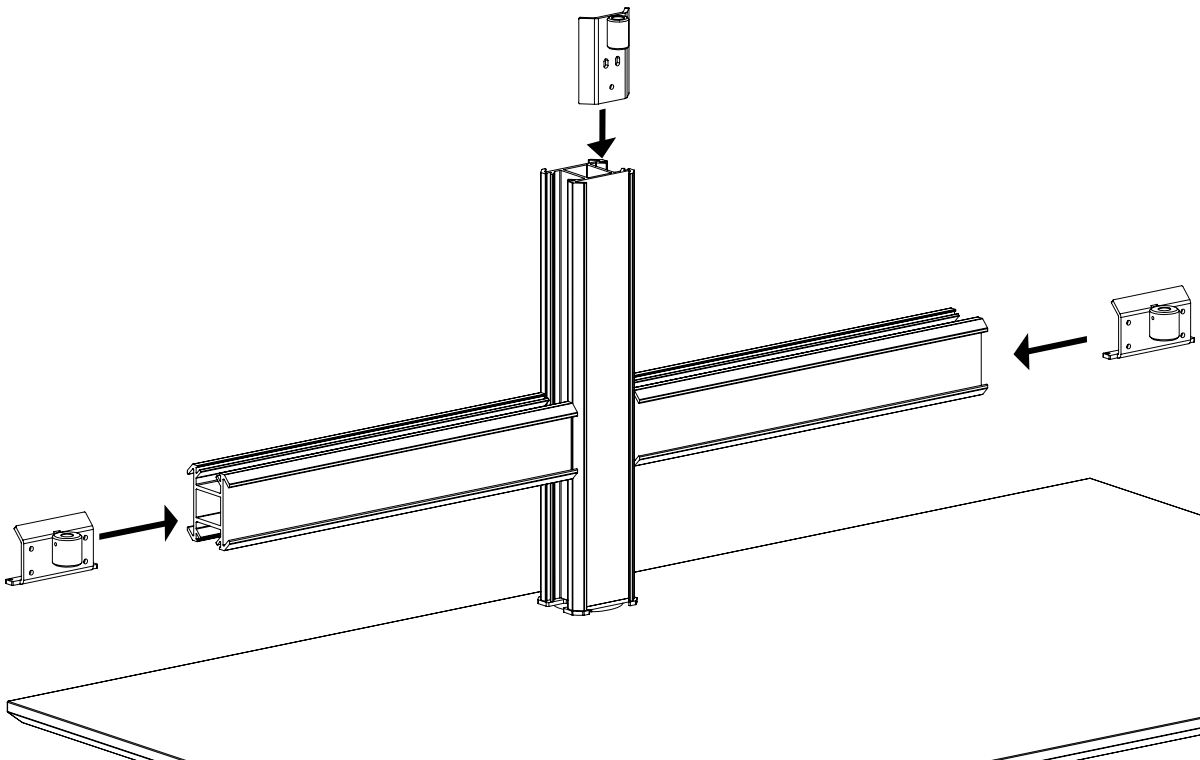**1x**

USE

1

⌀72
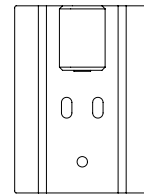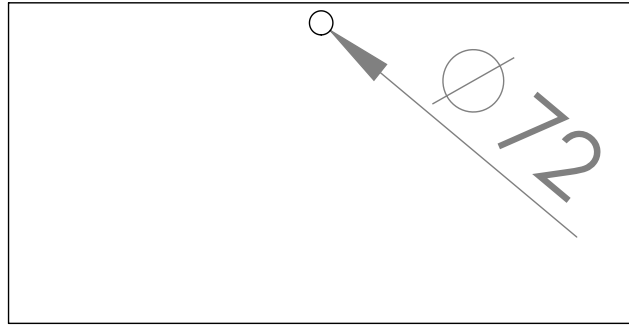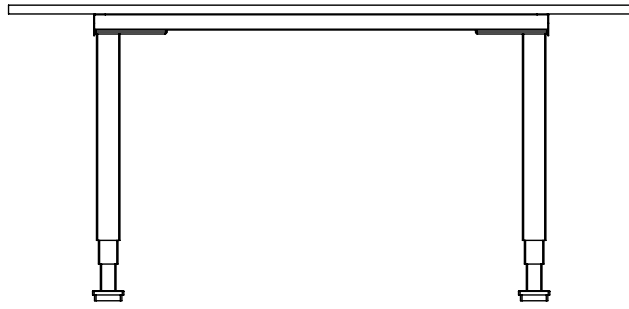
2

3

SLIDE THE ARMS DOWN THROUGH
GROOVES AND FASTEN THE SCREWS
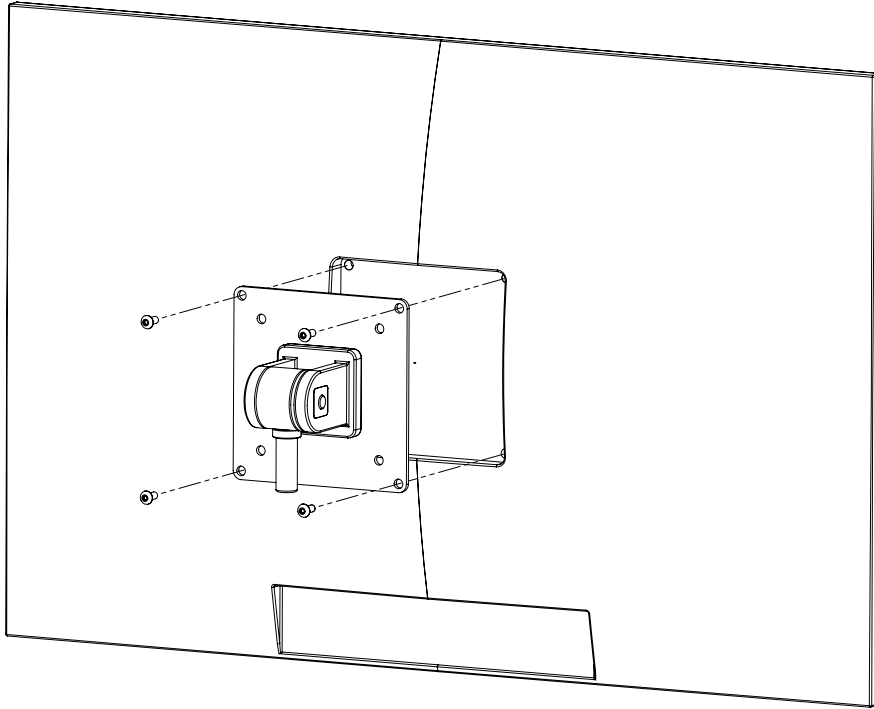WHEN THE ARMS ARE IN THE DESIRED
HIGHT.

OBS! DO NOT FASTEN THE SCREWS TO
TIGHT, BECAUSE YOU MUST BE ABLE
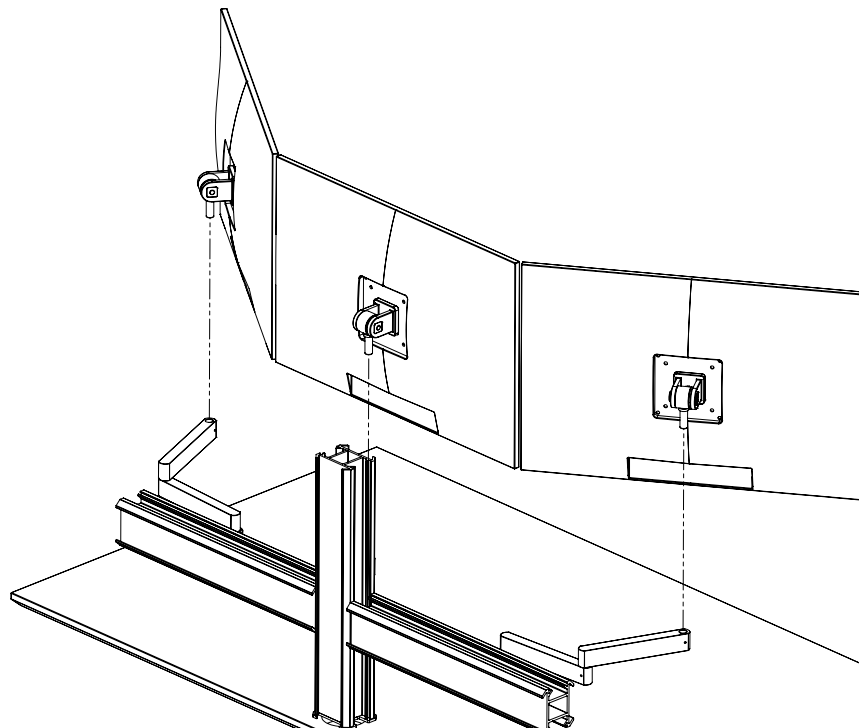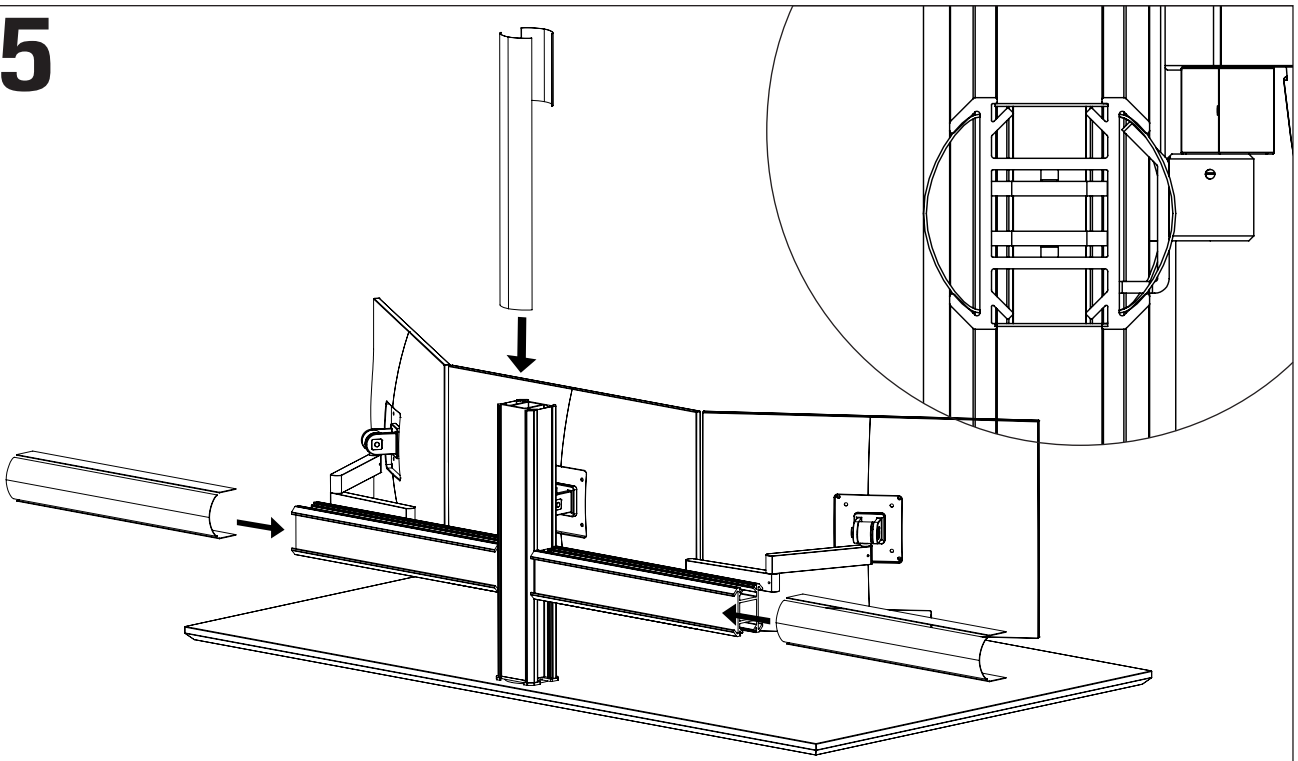TO ADJUST THE MONITORS IN STEP 6.

4

5

FASTEN YOUR MONITORS TO THE VESA MOUNTS.

6

PLACE YOUR MONITORS AND TIGHTEN THE ARMS ONE MORE TIME WHEN THE MONITORS ARE IN LINE.

5

CUT THE PLASTIC COVERS IN THE RIGHT LENGTH AND
SLIDE THEM IN POSITION THROUGH THE GROOVES.

6